



BEARING & TOOL CENTRE



Head Office

1st Floor, Vyapar Bhavan, Kadia Kui,
Relief Road, Ahmedabad - 380001.
Ph:- 079 - 22160386, 65254835, 22134835
Mobile : 7819819941, 9375706649

Ahmedabad Branch

GF-B-14, Jayraj Complex, Nr. Soni ni Chawl,
Odhav, Ahmedabad - 382415.
Ph:- 079 - 22890202, 65458950, 65404657, 65400202
Mobile : 7878825197, 7819819938, 9375706648

Website : www.bearingtoolcentre.com, www.bearingtoolscentre.com | Email : info@bearingtoolcentre.com

Our Sister Concern : RELIEF SERVICE CENTRE

Repairs, Removal of Jaw Error, Bore Gauge Extension, Instrument Modifications & Spares

Quotation

168 Digital Measure Tape

Make	W	C	D %	5 Mtr x L.c 10 mm or 0.1 Cm
MGW	6	N	-	Rs. 3000
Code				DMT - 5
Catalog				Page No. - 2
China	-	-	-	Rs. 3000

*** W – Warranty , C – Certificate , D- Discount

Terms & Conditions –

- Goods offered - Subject to Prior Sale
- Price Validity: "15 Days from Date of Quotation"
- C.S.T 2% extra against form C. Otherwise 5% without form C For Out of Gujarat Sales only.
- VAT 5% extra for Sales within Gujarat. Prices Ex-Godown Ahmedabad.
- Payment against Proforma Invoice, Packing, Forwarding & Freight extra.
- **Bank Detail** – Kotak Mahindra Bank Ltd.
- **Branch** – Shivranjini
- **Bank IFSC Code** - KKBK 0000 810
- **Bank Account No.** 08102 00000 2689
- Note - While making payment online do mention your Company's name.
- TIN NO 24070901229 , CST No. 24570901229
- We are looking forward to your valued orders.

M&W MAKE

Digital Measure Tape



DMT-5

SPECIFICATIONS

- Width of tape : 19mm
- Range: 5m; Resolution: 1mm
- Accuracy:0-1m: ± 1 mm;

METRIC

CODE	PRICE
DMT-5	4,500/-


CHINA MODEL





DIGITAL MEASURE ESTIMATOR OPERATION MANUAL

1. Introduction

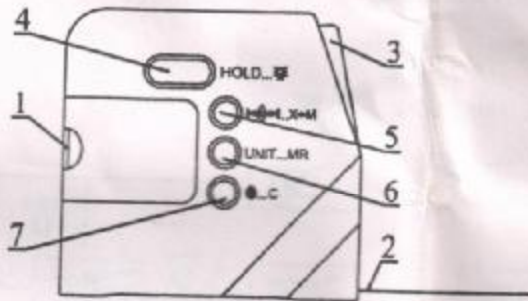

1. Battery drawer: pull out it to change the battery
2. Blade
3. Lock key: press it to pull out or retract the blade; release it to lock the blade
- 4-7. Function buttons

LCD display



- | | | |
|-----------------------|--------------------------------|------------------------------------------|
| ' : Feet | " : Inch | cm : Centimeter |
| ☹ : Battery warning | ← : Relative measuring | → : Inside measuring (add case length) |
| H : In hold situation | M : Displayed data from memory | B : Sequence number of M |

2. Functions of Buttons

Using buttons

First function: press shortly ✓ (HOLD, ←, UNIT, ☹)

Second function: press and hold >1s ✗ (☹, X→M, MR, C)

press shortly in hold ("H") situation ✓ (X→M, MR)

2.1 HOLD...☹

HOLD: Press shortly. Hold or free the measurement. In hold situation, "H" is displayed

☹: Press and hold 1S. LCD backlight illuminates for 4 second

2.2 ←...X→M

←: Press shortly. Change outside or inside measuring mode and reverse LCD figures orderly: outside measuring—inside measuring—outside measuring, LCD figures in opposite view—inside measuring, LCD in opposite view. Add case length 7.6cm in inside measuring mode

X→M: Press and hold 1S. Turn into "H" situation, save the measurement to memory, add 1 to the sequence number, display "H" "M" and sequence number. It can store 8 data. The 9th data will be stored to M8, the old sequence number 2~8 minus 1. The first data M1 will be covered.

Press shortly in "H" situation. Result is same as above

2.3 UNIT...MR

UNIT: Press shortly. Convert unit orderly: cm—ft and inch—inch—decimal inch

MR: Press and hold 1S. Turn into "H" situation, recall the data in memory, display "H" "M" and number


Press shortly in "H" situation. Result is same as above. Press again it will display next stored data, and add 1 to the sequence number

2.4 ...C

: Press shortly. Power switch. Automatically shutoff after 6 minutes inactivity

C: Press and hold 1S. Set zero in free situation

Clear the displayed data from memory in "H" situation

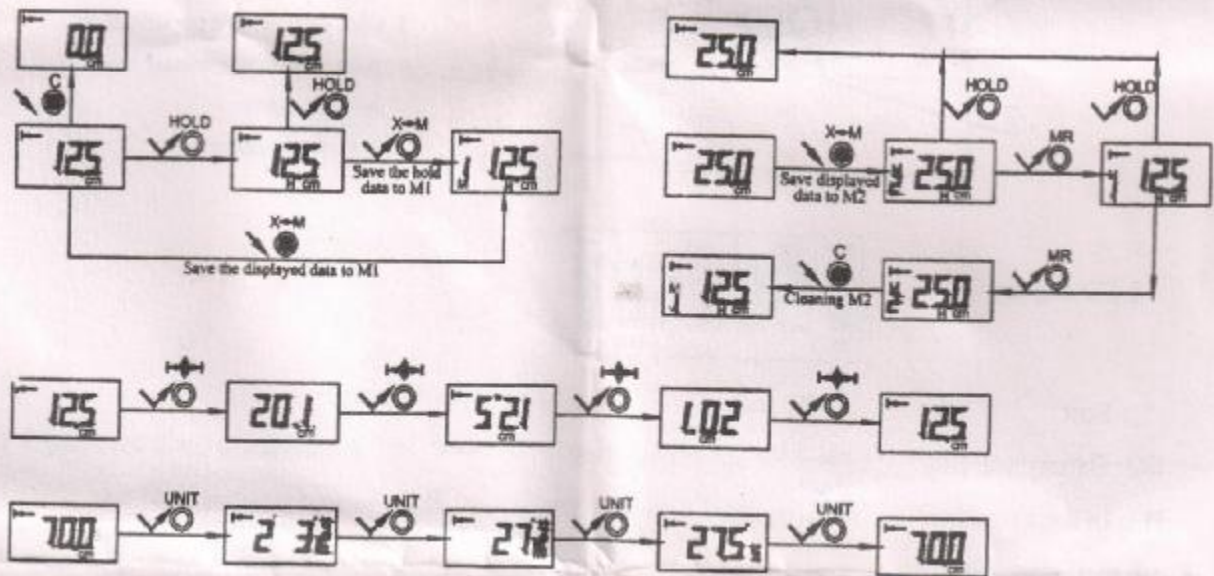

3. IMPORTANT

- Don't retract blade too fast (<math><1.5\text{m/S}</math>) otherwise the measurement may be wrong, even hurt the people
- Blade must be retracted fully when change battery or display "E-0"
- Change battery when display blurredly or display
- Don't pull out blade fully otherwise the tape may be damaged
- Don't use buttons when blade moving otherwise the measurement may be wrong
- Keep the blade clearly and dry
- Cleaning sensor: stick a $1.2 \times 2.5\text{cm}$ bi-sided adhesive tape between scale 3-7cm on the blade. Pull the blade forth and back several times, the tape will bring dirt out. Take off the tape after cleaning

4. Frequently-asked Questions

Error messages	Reasons	Corrective action
Display	1. Voltage of battery has dropped 2. Suffer from strong interfere	1. Replace the battery 2. Turn off the power and turn on it again
Display "F xxxx" and not accurate	Blade moves too fast	Move the blade smoothly (<math><1.5\text{m/S}</math>)
Display after change battery	Sensor is dirty	Use double sided tape cleaning sensor
Display "E-0"	Blade not be retracted fully	Retract the blade fully
Display "E-8"	Blade is pulled out too much	Retract the blade
Button and display are dead	Suffer from strong interfere or crash	Take out the battery and insert it again